

# HOW TO USE RUN LOCK



✓ With the engine running, press the Run Lock button.

✓ Wait approximately 10 seconds.

✓ Exit the vehicle, ensuring all doors are closed.

✓ Press the unlock button to lock the doors with the engine running.

✓ To unlock the vehicle again, simply press the unlock button.

